

Installation

Installation of the Piano Realism Pack requires the execution of multiple steps to be performed *exactly* as written in the instructions. Checkboxes are provided for marking your completion when you print these instructions.

First: Prepare for installation using these steps:

1. Backup your MOTIF XF (including installed flash memory) to a MOTIF XF-compatible USB storage device. Refer to the MOTIF XF Owner's Manual for instructions on how to perform this procedure. This is necessary to avoid data loss.
2. Press the **[UTILITY]** button, then press the **[Control]** soft button, and then press the **[MIDI]** soft button.
3. Take note of the **Local Control** ____ and **MIDI In/Out** ____ settings so that you can restore them if necessary. Also note any other global settings that are not defaults.
4. Ensure that you have the latest firmware in your synthesizer before proceeding. Refer to the MOTIF XF Owner's Manual for instructions on how to obtain and install that firmware.
5. Copy the "**PRP.n3.X3A**", and optionally the "**XSSampleBank.X0A**" and "**CP1 Piano.X3A**" files from the respective distribution media to a MOTIF XF-compatible USB storage device using a computer.

Second: Install the Piano Realism Pack using these steps:

6. Press the **power switch** of your MOTIF XF to turn it **off**; wait 5 seconds, then press the **power switch** to turn it back **on**, and wait for its boot process to complete.
7. Insert the USB storage device into the MOTIF XF.
8. Press the **[FILE]** button, then use the jog wheel (if necessary) to **set Type=all**.
9. Press the **[^]** and **[v]** buttons to **select** the "**PRP.n3.X3A**" file.
10. Press the **[Load]** soft button, and then press the **[INC/YES]** button to confirm.
11. When complete, the synthesizer may report "No sample data." This is normal. Press the **[ENTER]** button to confirm.
12. To restore the **Local Control** and **MIDI In/Out** settings that you noted earlier, press the **[UTILITY]** button, then press the **[Control]** soft button, and then press the **[MIDI]** soft button. Then press the **[^]** and **[v]** buttons and use the jog wheel to change the values as necessary. *Restore other global settings only after you have tested the Piano Realism Pack.*
13. If you do not have flash memory installed: installation is complete. Press the **[EXIT]** button to exit File mode, read the notes below.

Third: If you have flash memory installed, load the S700 and CP1 pianos by following the remaining steps:

14. Clear your flash memory as follows (see Note 2): Press the **[UTILITY]** button, then press the **[Flash]** soft button, then press the **[Delete all]** soft button, and then press the **[INC/YES]** button to confirm.
15. Load the S700 piano from the XS Sample Bank using these steps:
 - a. Press the **[FILE]** button.
 - b. Press the **[<]** and **[>]** buttons and use jog wheel to **set Type=voice**.
Keep the default settings: Part=1, Bank=USR 1:001.
 - c. Press the **[^]** and **[v]** buttons to **select** the "**XSSampleBank.X0A**" file, and then press **[ENTER]**.
 - d. Press the **[v]** button to **select** the "**S700 for XS**" voice.
 - e. Press the **[<]** and **[>]** buttons and use jog wheel to **set "Load USR"= FL1**
 - f. Press the **[Load]** soft button, and then press the **[INC/YES]** button to confirm.
16. Load the CP1 Piano using these steps:
 - a. Press the **[<]** and **[>]** buttons and use jog wheel to **set Type= "1 bank voice"**.
 - b. Press the **[^]** and **[v]** buttons to **select** the "**CP1 Piano**" file, and then press **[ENTER]**.
 - c. Press the **[v]** button to **select** the "**USR 2**" entry.
Note: This is not the Bank setting that's below the list.
 - d. Press the **[Load]** soft button, and then press the **[INC/YES]** button to confirm.
17. If either the S700 and/or CP1 piano were installed using the previous steps, **you must** reload the Piano Realism Pack using the following steps:
 - a. Press the **[<]** and **[>]** buttons and use the jog wheel to **set Type=all**.
 - b. Press the **[^]** and **[v]** buttons to **select** the "**PRP.n3.X3A**" file.
 - c. Press the **[<]** and **[>]** buttons and use jog wheel to **set "Load USR"=USR**.
 - d. Press the **[Load]** soft button, and then press the **[INC/YES]** button to confirm.
18. Installation is complete. Read the notes below.

Piano Realism Pack™ for MOTIF XF

Note 1: If you load another file with Type=all, it will overwrite the Piano Realism Pack voices and performances that you've installed. Once the synthesizer has been loaded with the S700 and CP1 pianos, you can save your configuration with a Type=all for faster loading. For instructions on restoring individual voices from the backup you made prior to installation, please consult the MOTIF XF Owner's Manual.

Note 2: Although it may seem rather extreme to require that you delete all of the waveforms in your flash, this requirement ensures that you will have the most trouble-free installation. The Piano Realism Pack's voices were saved without waveforms, where the waveforms were in the first eleven FL1 (flash 1) positions, as shown in the list below. It is possible that your MOTIF XF will not re-associate the waveforms with the voices if they are in different positions. After installation, press the **[UTILITY]** button and then the press the **[Flash]** soft button to verify that the waveforms match those in this list.

- Waveforms FL1: 001 S700SftSt
- Waveforms FL1: 002 S700MedSt
- Waveforms FL1: 003 S700HrdSt
- Waveforms FL1: 004 CF 127 St
- Waveforms FL1: 005 CF 094 St
- Waveforms FL1: 006 CF 084 St
- Waveforms FL1: 007 CF 074 St
- Waveforms FL1: 008 CF 064 St
- Waveforms FL1: 009 CF Key Off St
- Waveforms FL1: 010 CF SW
- Waveforms FL1: 011 CF SW Light